

Instructions for:

BSD409 - Exhibition



Note: To assemble the unit, you need a #2 Phillips screwdriver.

STEP 1

Remove the contents from the box. You will find a telescoping top crossbar, a telescoping bottom crossbar (has a larger flange than the top crossbar), 2 bridge feet, foot inserts with two screws, and two telescoping upright bars.



STEP 2

Place a foot insert into a bridge foot.



STEP 3

Place the bridge foot on its side and insert a screw into the bottom of the bridge foot. Tighten with a #2 Phillips screwdriver. Repeat for the other foot.



STEP 4

Set the feet opposite each other and place the large flanged bottom crossbar onto the end of the feet. Note: If your banner has a pole pocket on the bottom, insert the bottom crossbar into the pole pocket before placing it onto the feet.



STEP 5

Screw the telescoping uprights in place and tighten.



STEP 6

Remove cap from the top of the telescoping pole. If your banner has a top pole pocket, insert the top crossbar through the pole pocket at this time. Place the top pole on the telescoping uprights so the flanges rest on the tops of the uprights. Screw the cap back in place.



STEP 7

The width and height of the unit is fully adjustable. Adjust counter-clockwise to loosen and clockwise to tighten.



Connecting Multiple Units

Step 1: Unscrew the cap from the top of an upright bar and place the flange of a horizontal crossbar on top of the first flange.



Step 2: Screw the cap back in place so it securely holds both flanges.



Step 3: To add a bottom horizontal crossbar, unscrew the entire upright bar, place flange on top of flange again and screw the upright bar back in place.