How to use the

PAQ-Roll Tape Applicator



Remove your Pro-Roll Tape Applicator Tool from the box.



Attach the black handle (loose inside the box) by screwing it directly into the Pro-Roll Tape Applicator Tool.




Unscrew thumbscrews on both sides of the Pro-Roll Tape Applicator Tool. Remove mounting rod from Pro-Roll Tape Applicator Tool.



Losen the screw in the locking collar with the "T" Allen wrench (included) and remove tape core caps from the mounting rod.



Press core caps into the core of your preferred brand of application tape (3" cores only) until they are flush with roll edge.

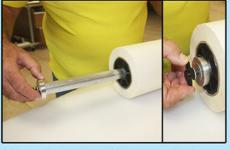

Slide application tape with core caps in place onto mounting rod. Center tape onto mounting rod and then tighten the locking collars to lock them in place. Add thumbscrews onto both mounting rod ends.



Place rod with application tape locked-on, back into the slots on the side of the Pro-Roll Tape Applicator Tool. Be sure application tape back (non-adhesive side) rolls against the black rubber roller.



Tighten both black thumbscrews tightly to lock rod onto the Pro-Roll Tape Applicator Tool.



Lift the Pro-Roll Tape Applicator with handle in one hand. Pull transfer tape down and under the rubber roller with the other hand. Pull between 9-12" of transfer tape beyond the black rubber roller. Keep tape tight against black roller.



Lower your hand holding the Pro-Roll Tape Applicator Tool down onto the table so that the application tape roll is resting on the table.



Continue to keep application tape tight against the black rubber roller. Lower the Pro-Roll Application Tape Tool allowing the rubber roller to now touch the table directly in front of the graphics needing application tape applied to them.



Be sure you have aligned your tape with your graphics and begin smoothing out the 9-12" of application tape onto the table to hold it in place



Simply tilt the Pro-Roll Tape Applicator back using the handle, lifting the application tape off of the table. Push the Pro-Roll Tape Application Tool across your graphics. Do not apply pressure downward. Let the Pro-Roll Tape Applicator Tool do all the work.



When you have gone past your graphics, cut the end of the application tape (never allow knife to touch black rubber roller) and you are ready for your next application.



When not in use we recommend parking your Pro-Roll Tool as shown below (without application tape installed)

This maintains the integrity of the foam roller and eliminates flat spots.



Tel: (800) 818-0222 Fax: (949) 709-7788

Email: info@image1impact.com Website: www.image1impact.com



Box Contents